


Vintage LEDs

Installation Instructions for 64.5-70 Mustang Dome Light

Dome Light Removal

Remove the two screws that hold the bezel to the roof.

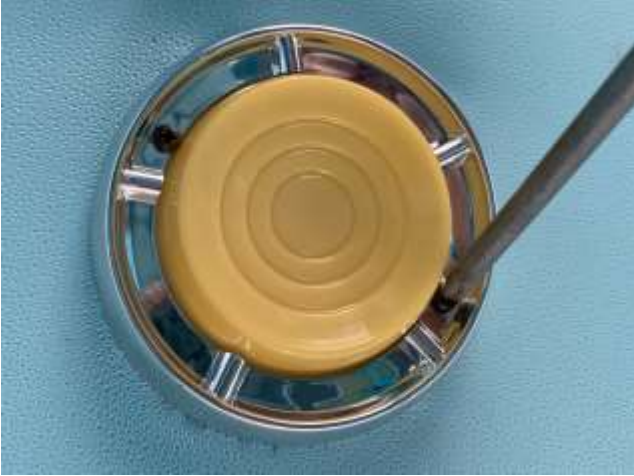

Remove the screw the single screw that hold the reflector to the roof. Keep this screw you will need it later.



Unplug the bullet connector for the power wire.



This is a good time to thoroughly clean your existing lens.

LED Board Installation

Your LED light kit comes with two rubber washers for securing the LED board to the lens. These are slid over the posts on the dome lens. Ensure that they are flush against the LED board.




Wiring

Using the screw that held the reflector, secure the ring terminal to the old reflector mounting hole. This is the ground for the LED board.

Plug the bullet connector into the existing dome light power wire.



Slide the bezel over the dome lens and secure it to the roof with the two screws.

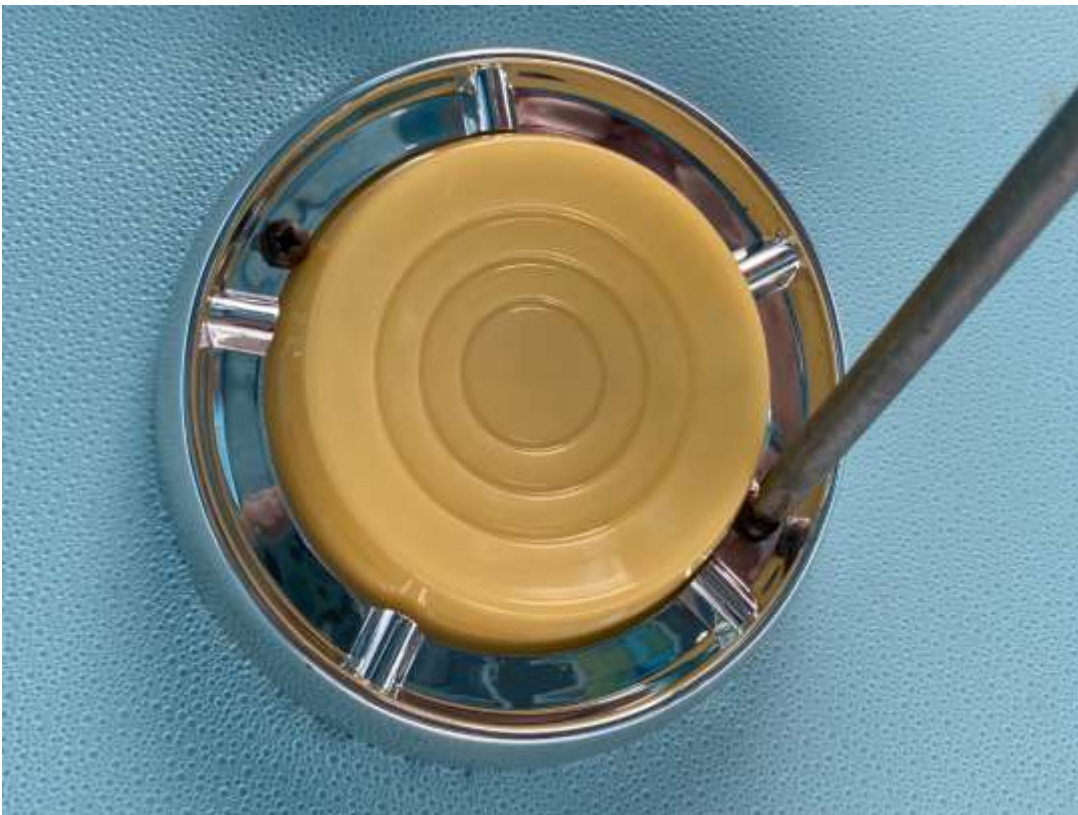

Now enjoy your new Vintage LEDs Dome Light.